



# Essential Personnel Only!

## Full Barrier Isolation Required

### Personal Protective Equipment (PPE) Placement for High Risk Procedures with Powered Air Purifying Respirator (PAPR)

#### Before ENTERING Negative Air Space

**STEP 1**  
**Put on shoe covers**



**STEP 3**  
**Put on head cover if half-hood is used**

Hair must be covered. Head cover is not needed if full hood is used.



**STEP 5**  
**Attach PAPR hose to hood; place hood over head**

Fully cover the face and chin.



**STEP 2**  
**Attach PAPR hose to power pack**

Turn power pack on. Verify air flow to hood.



**STEP 4**  
**Put on power pack**

Place power pack on mid-back and secure belt clasp around waist.

Turn on power pack.



**STEP 6**  
**Put on fluid-resistant gown and gloves**

Insert thumb into thumb hole. Tie securely in back. Pull gloves over sleeves to cover wrist.



### Personal Protective Equipment (PPE) Removal

#### Before LEAVING Negative Air Space

**Note:** Discard used items in red bag.

Following completion of patient cares and while still in negative air space:

**STEP 1**  
**Remove and discard shoe covers**



**STEP 2**  
**Remove and discard gown & gloves**

Grasp shoulders of gown and pull forward. Roll outside of gown inward, folding contaminated outside layer away from your body.

Remove gloves while rolling gown off arms; roll gloves into gown. Avoid contaminating hands. Keep hands on clean side of gown. Discard gown and gloves.



**STEP 3**  
**Perform hand hygiene**

Clean hands with antimicrobial soap and water or alcohol-based hand rub.



**Put on a new pair of gloves**



#### LEAVE Negative Air Space, CLOSE Door

**Note:** When using a PAPR, an assistant is required during PPE removal to assure proper removal and minimize contamination of equipment.

**STEP 4**  
**Gloves**

**Assistant:**  
Put on gloves.



**STEP 5**  
**Unfasten battery pack**

**Assistant:**  
Support battery pack while wearer unfastens pack.



**STEP 6**  
**Remove hood and head cover**

Discard head cover. Continue holding hood.

**Assistant:**  
Continue supporting battery pack.



**STEP 7**  
**Detach hose from hood**

Hold hood and hose away from body to avoid contaminating clothing.



Hand hose to assistant.

Place PAPR hood in designated receptacle for reprocessing or disposal.




**(Step 7, continued)**

**Assistant:**  
Place hose and power pack in designated receptacle for reprocessing.



**STEP 8**  
**All personnel remove and discard gloves and perform hand hygiene**

Clean hands with antimicrobial soap and water or alcohol-based hand rub.

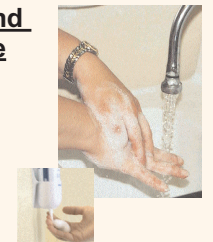

**Decontaminate power pack, hose, and hood per facility procedures before reuse.**